

CHILD

GUARD

CHILD SECURITY ALARM

Toddler Tracker is ideal for shopping trips, daytrips or whenever you and your family are out and about. If your toddler wanders out of your chosen preset range, an alarm instantly beeps to warn you. Please note, that the Toddler Tracker is not meant as a substitute for personal parental supervision. Always check that the Sender's straps are safe, secure and comfortable.


User's Guide

1. Place the Sender & the Alarm Receiver close together within 10 cm.
2. Turn the Sender's power switch ON. The red LED light will flash.
3. Turn the Alarm Receiver's switch ON. One long beep indicates the Alarm Receiver is starting to encode. Two short beeps indicates the encoding was successful.
The Alarm Receiver's LED light should now start flashing. If there is no beep, or irregular beeps are heard, reset the Alarm Receiver by pushing the RESET button.
4. Fasten the Sender on the child. Parents carry the Alarm Receiver.
5. Adjust the range control from 1-7 metres (3-21 feet).
6. When the distance between the Sender and the Alarm Receiver is greater than the range control setting, the alarm instantly beeps.
7. If the sender becomes damaged (e.g. falls into water) or is turned off during operation, the Alarm Receiver will beep immediately and continuously.


Please note...

- A. Do not cover the Sender or Alarm Receiver with a metal object as this will affect the communicating signal.
- B. Range may vary according to local conditions (ie, if the signal is blocked).
- C. If the range becomes shorter or the alarm sound becomes weaker, replace the supplied batteries. You must then reset the Alarm Receiver, by following point 1 in the User's Guide above
- D. Turn the Toddler Tracker's power switches off whenever it is not in use.

Child Sender

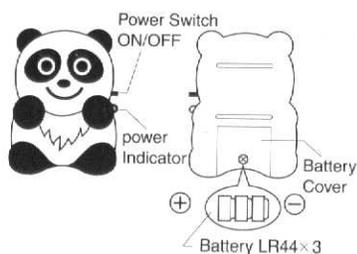

Parent Receiver

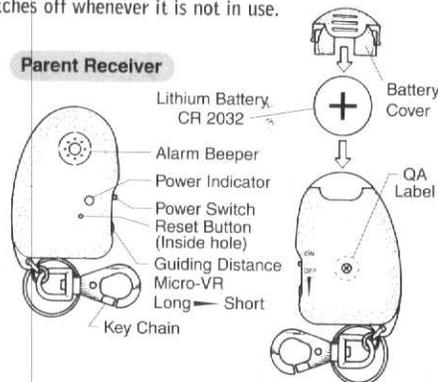

Model: YS-088
Made in China

CHILD GUARD



Key Features

- ▶ A high-pitched beep to immediately alert you if your child begins to wander away from your care.
- ▶ The monitoring distance can be adjusted by parent from 3 to 21 feet depending on circumstances.
- ▶ Device has an independent auto digit lock system with over 16 million passwords from which one is randomly selected each time the device is switched on.
- ▶ This prevents interference from other units.
- ▶ The parent receiver unit will activate with a high-pitched beep when the child's unit is switched off or damaged.
- ▶ Batteries included.



- Safe for your child to carry.
- Keep your child within range of your care.
- Alarm sounds when your child leaves monitored area.